

Features

- Two Independent Delay Channels (Four channels available as an option)
 - 1 ps Time Resolution
 - < 5 ps RMS Jitter (Slave-to-Slave)
 - < 6 ps /°C Drift (Slave-to-slave)
 - 1 Second Range
- Output Pulse
 - 3.3 V under 50 Ω
 - 1 ns Rise Time under 50 Ω
- Three Trigger Modes
 - Internal, External, or Timing System
- Controlled via Ethernet, Web Page and Front Panel
- Compact Packaging 2U, 19"

Applications

- Picosecond Timing System
- Components Test
- ATE Application
- System Laser Timing Control
- Control Flash Lamps and Q-Switches
- Instrument Triggering
- Precision Pulse Application
- Timing Control of Diagnostics




Description

The GFT1012A Precise Slave Delay Generator is specially designed to provide precise pulses in Timing System applications where a Master delivers an optical data stream to synchronize Slave Delay Generators (see application below).

The GFT1012A provides two independently delayed pulses on the rear panel (four channels are available as an option). Delays up to 1 second can be programmed with 1 ps resolution, and channel-to-channel jitter is less than 5 ps RMS. BNC outputs deliver pulses up to 10 V with 1 ns rise time under 50 Ω.

The GFT1012A provides three trigger modes: External trigger mode from trigger input, Internal trigger mode from one synchronized timer or software command, Timing System mode from optical input linked to a Master. One T0 channel is used as a delay reference for all delay channel output pulses.

GFT1012A parameters can be locally controlled from the front panel keys and LCD display, and remotely controlled via Ethernet (10/100 Mb/s) or Internet (Web page from Internal Web server).

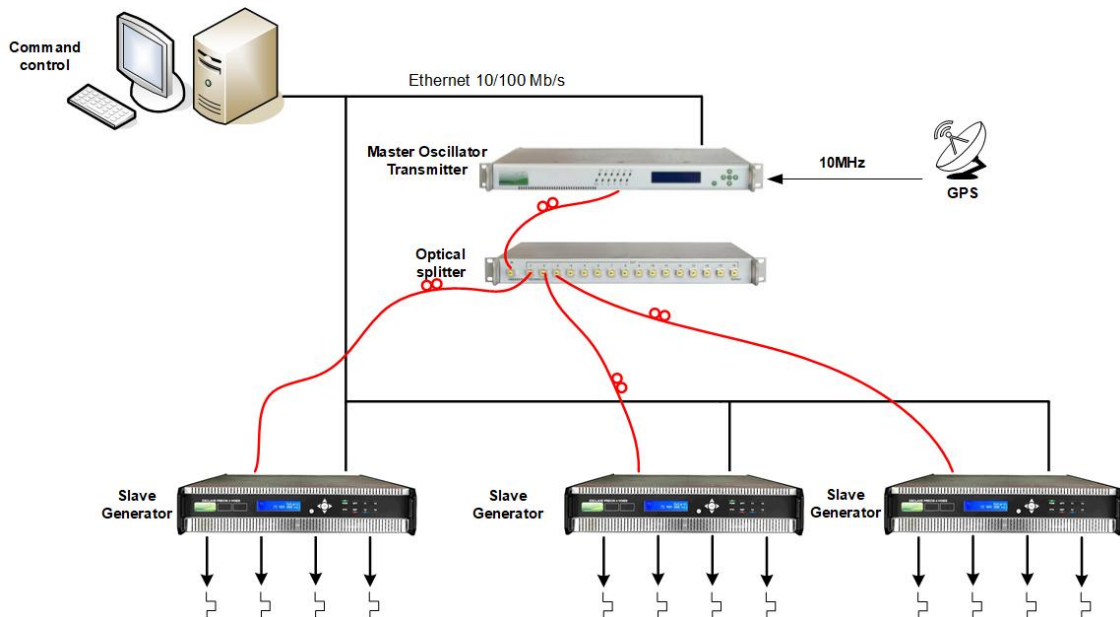

Picosecond Timing System Application with 3 Slave Generators (12 delay c

2/4 Channel Precise Salve Generator


Specifications

Delay Channels	
Number	2 independents (or 4 in option)
Range	0 to 1 second
Resolution	1 ps
RMS Jitter (for short delay)	
Timing system mode	< 5 ps (Slave to slave)
External trigger	< 1.5 ns (External trigger to T0 Output)
Drift (for short delay)	< 6 ps pp /°C @ 24 hours (Slave to Slave) < 10 ps pp /°C @ 7 days < 15 ps pp /°C @ 1 month
Accuracy	< ± 10 ps pp for a delay between 0 ns to 20 ns < ± 30 ps pp for a delay between 20 ns to 100 ns < ± 50 ps pp for a delay between 100 ns to 1 µs < ± 100 ps pp for a delay between 1 µs to 1s
Time base	155.52 MHz frequency
Trigger Input	
Repetition Rate	Up to 100 kHz
Trigger Level	+5 V /50 Ω
Slope	Positive
Connector	BNC
Internal Trigger	
One Synchronized Generator	Frequency= 1 Hz to 100 000 Hz
Optical Input Trigger	
Function	Input for Timing System Operation
Sensitivity	Between -10 to -25 dBm
Wavelength	1550 nm ± 10 nm
Connector	SC/APC
Output Pulse T1 to T2 (and T1 to T4 in option)	
Amplitude	3.3 V
Load	50 Ω ± 2%
Rise / Fall time	< 1 ns / 1 ns
Width	1 µs +/- 100 ns
Form	Square
Connector	BNC
Output T0	
Amplitude	3.3 V
Load	50 Ω
Rise / Fall time	< 1 ns / 3 ns
Width	1 µs +/- 100 ns
Form	Square
Clock Output	
Frequency	9.72 MHz (synchronized on time base)
Load	50 Ω ± 2%
Level	> ± 1 V pp / AC
Form	Square
Connector	BNC
General	
Software	Free Drivers for Windows 11
User Interface	Front panel, Ethernet 10/100 Mb/s, Internet (Web page)
Power Consumption	90 to 240 V / 50 - 60 Hz / 1 A
Operating Temperature	20 to 25°C
Weight / Size	< 25 kg / 19", 2U, 503 mm (with handles)
Option	
Option 1	Extension to 4 channels
Option 2	Other Time base (ask to factory)

Functional Overview

Block diagram

The GFT1012A includes the five following functions: Time Base, Trigger Controller, Delay Channel, Fine Delays and Interface Controller.

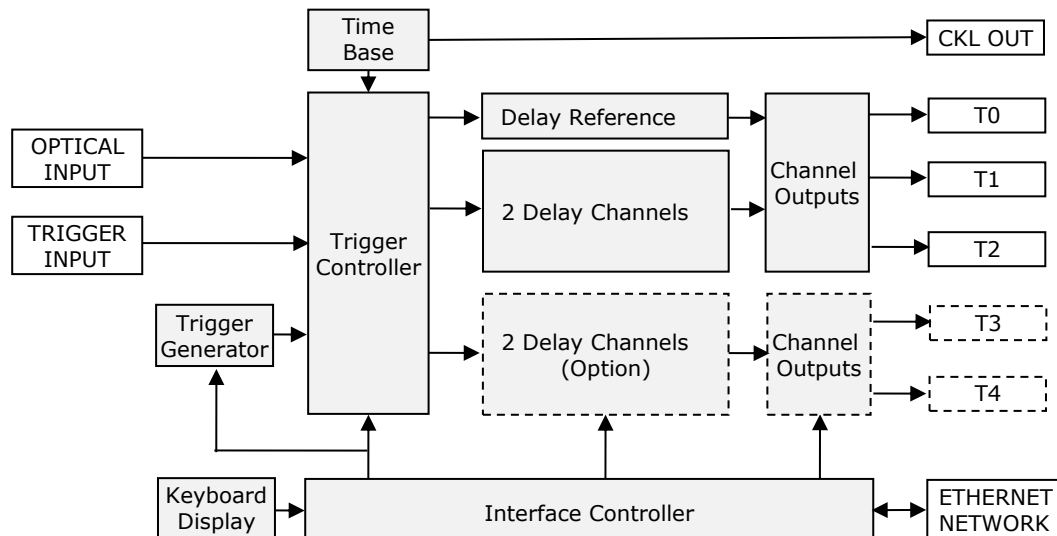

Block Diagram

Time Base: This function provides a 155.52 MHz time base from an internal clock (10 MHz) or from an optical timing system. The time base (9.72 MHz) is available on a rear-panel (CLCK OUT).

Trigger Controller: This function provides 3 Trigger modes to delay channels.

- External trigger mode

When the external trigger mode is selected, a rising edge on a "Trigger input" starts a delay channels.

- Internal trigger mode

In this mode delay channels can be started from an internal Trigger Generator, programmable between 1 Hz to 100 000 Hz.

- Timing System mode

In this mode the GFT1012A receives on "Optical Input" an optical data stream from a GFT3022 Master Unit. GFT3022 provides triggers and time base over an optical network to synchronize multiple Slave Delay Generators. Triggers can be repetitive or single-shot:

- **Repetitive Triggers:** Three triggers (F1, F2 and F3) are synchronous with the Time base and synchronous between each other. Their frequency of repetition is programmable according to 1 kHz to 1 Hz
- **Single Shot Triggers:** A burst of three triggers (DEC0, DEC1 and DEC3) are started by an external signal or a command in GFT3022 Master. The three triggers are synchronous with repetitive trigger F3. DEC0 is used to activate low frequency equipment very early in the event like, for example, high voltage power supplies. DEC1 and DEC3 are used to activate fast equipment near or during the event like digitizers, streak cameras, and calorimeters for diagnostics.

In timing system mode each channel can be started from one of 6 triggers (3 repetitive and 3 Single shot). After power on all trigger sources are automatically set off.

Delay Channel: There are two or four delay channels (T1 to T4). The delay of each channel is programmable up to 1 second in 1 ps increments.

The T0 output pulse is used as a delay reference for all delayed output pulses.

Channel Output: Each delay channel provides an output pulse. The outputs are designed to drive 10 V, 1 ns under 50 Ω loads.

Interface Controller: It manages internal functions (Time Base, Delay Channels, Front Panel operation) and user's interface (Ethernet network and Web pages via embedded web server).

2/4 Channel Precise Salve Generator

Software tools


They are three ways to control the generator

- **Local way** via the front panel (Display, Keyboard, and Indicators)



Front panel control

- **Quick remote way** via Internet (Web page from Internal Web server)

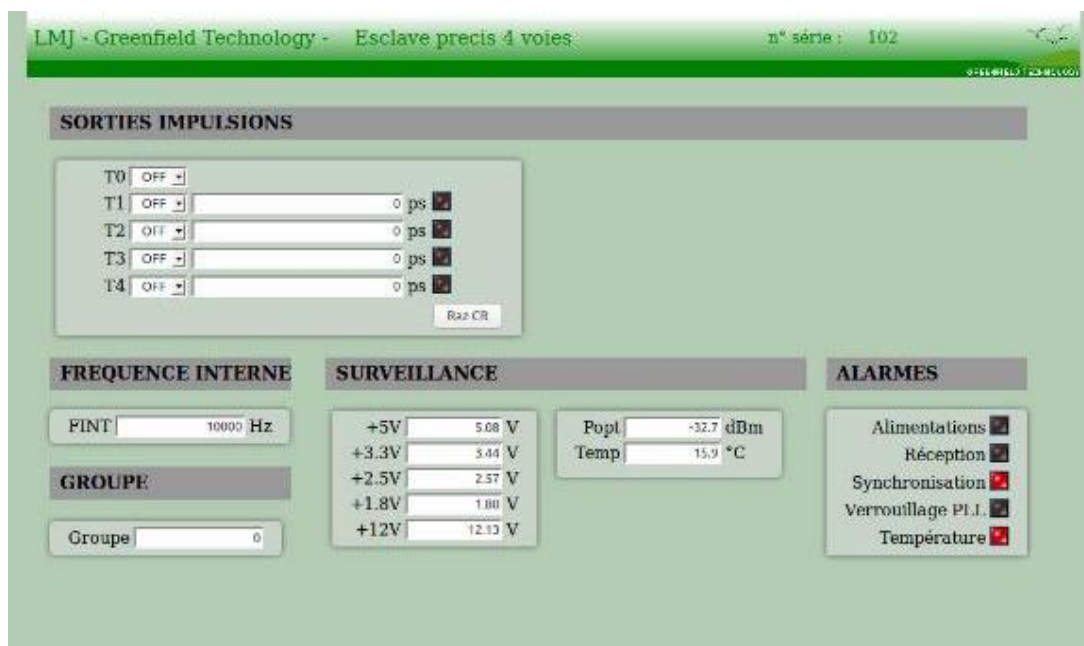

GFT1012A Main Web Page

This web page, from an embedded Web server, provides a simple method to configure settings for each channel (delay, trigger mode, trigger source), to control operation, and to display status of the instrument.

The configuration information of the instrument is stored and saved in the GFT1012A.


The web page can be opened via Edge, Mozilla Firefox or Chrome. After connecting a cable from the GFT1012A's Ethernet port to your computer network, enter the GFT1012A's IP address into your PC's browser (the IP address can be identified or assigned via the front panel). The browser will automatically open the control panel web page on your PC.

- **General remote way** via LabVIEW software application in or PC software application.


2/4 Channel Precise Salve Generator

Product Interface

Front panel

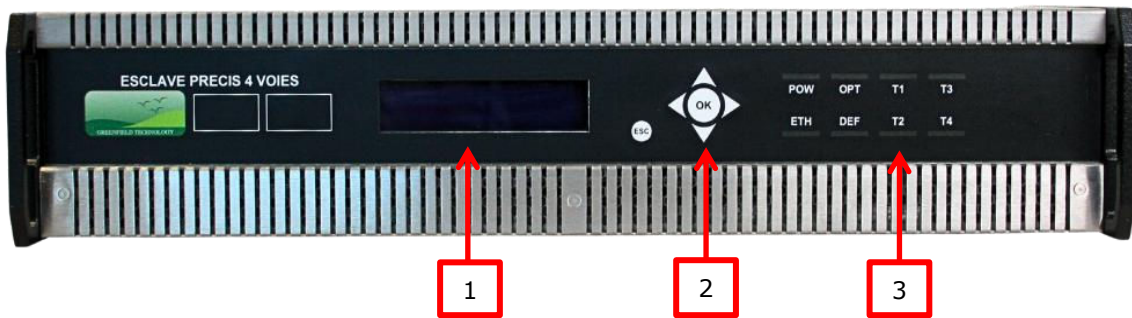

Rear panel

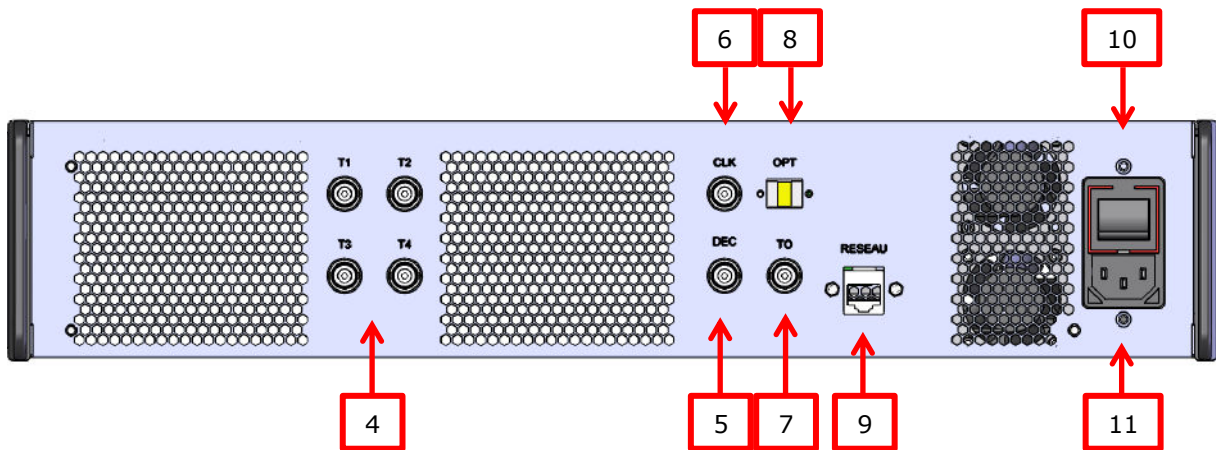

Interface

Front Panel			Rear Panel		
1	Display for local control		Connectors		
2	Small keyboard for local control		4	T1 to T4	T1 to T4 outputs: BNC connector
Indicators			5	DEC	Trigger Input: BNC connector
3	OPT	Synchronized by optical network	6	CLK	Clock output: BNC connector
	T1	Blinks at the trigger frequency of channel 1	7	T0	T0 output: BNC connector
	T2	Blinks at the trigger frequency of channel 2	8	OPT	Optical Input: SC/APC connector
	T3	Blinks at the trigger frequency of channel 3	9	Ethernet	LAN connection: RJ45 connector
	T4	Blinks at the trigger frequency of channel 4	10	Power	AC power plug (90-240 V) and
PWR	Power supply ON		Switch		
ETH	RJ45 connected		11	ON/OFF	Power ON/OFF switch

2/4 Channel Precise Slave Generator

Ordering Information

Model	Description
GFT1012A	Precise slave generator base version
-1	Extension to 4 channels
-2	Other time base

Ordering example: GFT1012A-4: 4 Channel Precise Slave Generator